


PLACEMENT OF BARRIER WALL MOUNTED MARKERS

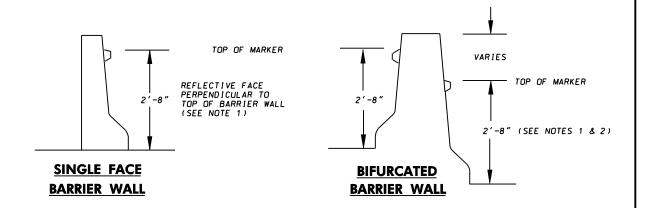

PLACEMENT OF POST MOUNTED DELINEATORS

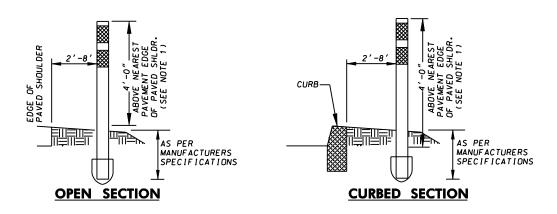

PLACEMENT OF W-BEAM & WOOD POST DELINEATORS

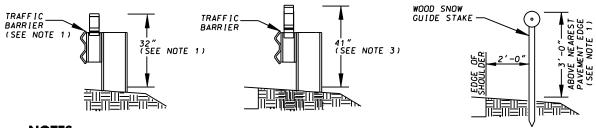

NOTES:

- 1. THE HEIGHT OF THE DELINEATOR SHOULD BE WITHIN 2 INCHES OF THE DIMENSIONS SHOWN.
- 2. BARRIER MARKERS SHOULD BE TOP AND SIDE MOUNTED IN CONSTRUCTION ZONES. PERMANENT INSTALLATIONS SHOULD BE SIDE MOUNTED ONLY.
- 3. HEIGHT OF DELINEATOR MAY BE INCREASED AS NECESSARY IN AREAS HAVING EXCESSIVE PLOWED SNOW STORAGE.
- 4. W-BEAM MARKERS SHALL BE FASTENED TO WOOD OFFSET BLOCKS BY GALVANIZED 6 PENNY NAILS.

